

Assembly Instruction




410016 CABINET BROOKE

STEP1



STEP2

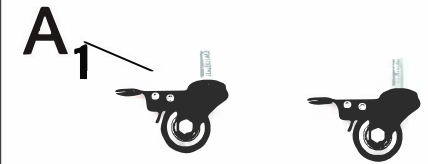

A:2PCS



B:2PCS